

## SERVICE CHECK LIST - Classic Range Rover 300TDi

|                                                                                                                         | Mileage '000miles |    |    |    |
|-------------------------------------------------------------------------------------------------------------------------|-------------------|----|----|----|
|                                                                                                                         | 6                 | 12 | 24 | 48 |
| <b>VEHICLE INTERIOR</b>                                                                                                 |                   |    |    |    |
| Check condition and security of seats belts, seat belt mountings, seat belt buckles and operation of inertia seat belts |                   | X  | X  | X  |
| Check operation of all lamps, horns and warning indicators                                                              | X                 | X  | X  | X  |
| Check operation of front/rear wipers and washers and condition of wiper blades                                          | X                 | X  | X  | X  |
| Check operation of handbrake and adjust if required                                                                     |                   | X  | X  | X  |
| Depressurise electronic air suspension                                                                                  |                   |    | X  | X  |
| Renew electronic air suspension compressor intake filter                                                                |                   |    | X  | X  |
| Remove/refit air reservoir drain plug                                                                                   |                   |    | X  | X  |
| Repressurise air suspension system                                                                                      |                   |    | X  | X  |
| <b>VEHICLE EXTERIOR</b>                                                                                                 |                   |    |    |    |
| Check/adjust headlamp and auxillary headlamp alignment                                                                  |                   |    | X  | X  |
| Remove road wheels                                                                                                      |                   | X  | X  | X  |
| Check tyres comply with manufacturers specifications                                                                    | X                 | X  | X  | X  |
| Check tyres visually for cuts, lumps, bulges, uneven tread wear and depth and tyre pressure                             | X                 | X  | X  | X  |
| Inspect brake pads for wear, calipers for leaks, and disks for condition                                                | X                 | X  | X  | X  |
| Refit road wheels to original hub position                                                                              |                   | X  | X  | X  |
| Check front wheel alignment                                                                                             |                   | X  | X  | X  |
| Lubricate bonnet catches and fuel flaps                                                                                 |                   | X  | X  | X  |
| <b>UNDER BONNET</b>                                                                                                     |                   |    |    |    |
| Check cooling, intercooler and heating systems, top up as required                                                      | X                 | X  | X  | X  |
| Lubricate distributor rotor spindle                                                                                     |                   |    | X  | X  |
| Renew spark plugs                                                                                                       |                   |    | X  | X  |
| Check/adjust valve clearances                                                                                           |                   | X  | X  | X  |
| Renew fuel filter element                                                                                               |                   | X  | X  | X  |
| Renew air cleaner elements and clean drain holes                                                                        |                   |    | X  | X  |
| Check condition of driving belts                                                                                        |                   |    | X  | X  |
| Check/top up automatic transmission fluid                                                                               |                   | X  |    |    |
| Check/top up power steering fluid reservoir                                                                             |                   | X  | X  | X  |
| Check/top up clutch fluid reservoir                                                                                     |                   | X  | X  | X  |

X indicates items carried out during a standard service. Due to our policy of continuous improvement, the work undertaken on your vehicle service may be altered without prior notification.

## SERVICE CHECK LIST - Classic Range Rover 95/96/97 Model Year

|                                                                                                                           | Mileage '000miles |    |    |    |
|---------------------------------------------------------------------------------------------------------------------------|-------------------|----|----|----|
|                                                                                                                           | 6                 | 12 | 24 | 48 |
| <b>UNDER BONNET (Continued)</b>                                                                                           |                   |    |    |    |
| Check/top up brake fluid reservoir                                                                                        |                   | X  | X  | X  |
| Check/top up windscreen and rear washer reservoir                                                                         | X                 | X  | X  | X  |
| Lubricate accelerator and cruise control linkages                                                                         |                   | X  | X  | X  |
| Remove battery connections - clean, grease and refit                                                                      |                   |    | X  | X  |
| Visually check intercooler/radiator for external obstructions                                                             |                   | X  | X  | X  |
| Flush diesel intercooler element                                                                                          |                   |    |    | X  |
| <b>UNDER VEHICLE</b>                                                                                                      |                   |    |    |    |
| Renew engine oil and filter                                                                                               | X                 | X  | X  | X  |
| Renew gearbox oil                                                                                                         |                   | X  | X  | X  |
| Renew automatic transmission oil and filter                                                                               |                   |    | X  | X  |
| Renew transfer box oil                                                                                                    |                   |    | X  | X  |
| Check/top up transfer box oil                                                                                             |                   | X  |    |    |
| Renew front and rear axle oil                                                                                             |                   |    | X  | X  |
| Check/top up front and rear axle oil                                                                                      |                   | X  |    |    |
| Renew swivel pin housing oil                                                                                              |                   |    | X  | X  |
| Check/top up swivel pin housing oil                                                                                       |                   | X  |    |    |
| Lubricate propeller shaft universal/sliding joints                                                                        |                   | X  | X  | X  |
| Visually check brake servo hose, fuel, clutch pipes/unions for chafing, leaks & corrosion. Investigate if necessary       | X                 | X  | X  | X  |
| Check exhaust system for leaks, security and damage                                                                       |                   |    | X  | X  |
| Check for fluid leaks from power/manual steering & suspension systems, hydraulic pipes and unions for chafing & corrosion |                   | X  | X  | X  |
| Check/tighten steering unit and steering rod ball joint fixings, check condition of all joints and dust covers            |                   | X  | X  | X  |
| Check air suspension pipes and springs for security and damage                                                            |                   | X  | X  | X  |
| Check shock absorbers/height sensors and harness assembly for leakage and damage                                          |                   | X  | X  | X  |
| Check/tighten front and rear axle suspension link fixings, check condition of mounting rubbers                            |                   | X  | X  | X  |
| Drain fuel sedimenter                                                                                                     |                   | X  | X  | X  |
| Check security of towing bracket                                                                                          |                   | X  | X  | X  |
| Check road wheel speed sensor electrical harness for damage (ABS only)                                                    |                   | X  | X  | X  |
| Carry out road or roller test                                                                                             | X                 | X  | X  | X  |
| Endorse service record and report any unusual features of vehicle condition and additional work required                  | X                 | X  | X  | X  |

X indicates items carried out during a standard service. Due to our policy of continuous improvement, the work undertaken on your vehicle service may be altered without prior notification.